



## ADVANTEC<sup>®</sup> STOPPER

Created by the world leader in seals for wine, the innovative Advantec<sup>®</sup> stopper features all of the preventive and corrective measures for reduction of TCA developed by Amorim, including the internationally recognised ROSA<sup>®</sup> system. Designed to be a standard in seals for high-rotation wines, Advantec<sup>®</sup> is a simply unbeatable solution in terms of both price, and sensory and technical performance.




AMORIM

# Specifications

TESTS	CHARACTERISTICS	SPECIFICATIONS
Physical-Mechanical	Length	$l \pm 1,0 \text{ mm}$
	Diameter	$d \pm 0,4 \text{ mm}$
	Ovalisation	$\leq 0,3 \text{ mm}$
	Moisture	4% - 9%
	Specific weight	250 - 330 Kg/m <sup>3</sup>
	Extraction force	20 - 40 daN
Physical-Chemical	Peroxide content	$\leq 0,1 \text{ mg/cork}$
	Dust content	$\leq 3 \text{ mg/cork}$

# Production Flowchart

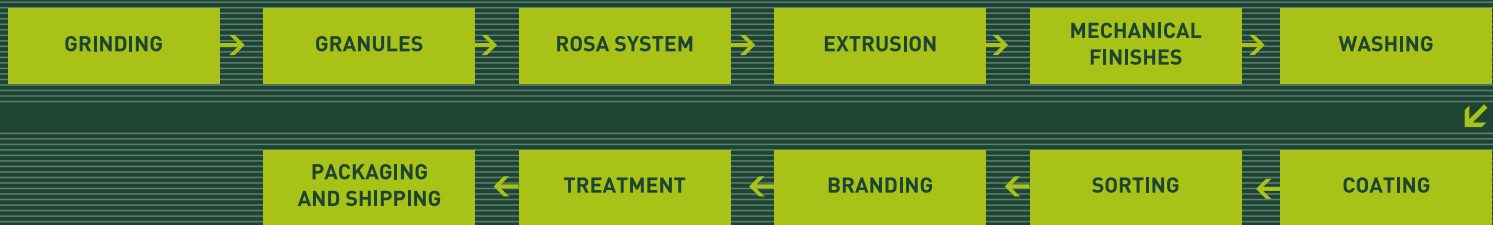

## Standard dimensions

44 x 23 mm

38 x 23 mm

### Food Standards:

All Amorim & Irmãos, S.A. products comply with existing regulations and legislation (European and FDA - Food and Drug Administration) for products in contact with food.



U.I. Amorim Distribuição  
U.I. Amorim Distribuição  
U.I. PTK  
U.I. Champcork  
U.I. RARO



## Recommendations to the user

### Selection and Storage of Corks Stoppers

- Amorim & Irmãos can calculate the required cork diameter from the design of the neck of your bottle, the characteristics of the wine and the corking conditions.
- Order your corks for immediate or quick use. These stoppers should be used within 6 months of the date of manufacture.
- Store in a well-ventilated room with controlled temperature between 15°C and 20°C and 50% to 70% humidity.

### Corking conditions

- Ensure any dust is removed before corking.
- Ensure the cork is compressed slowly, to a diameter no less than 15.5 mm.
- Ensure insertion of the cork is as quick as possible.
- For standard bottlenecks, the cork should be inserted to 1 mm below the top of the neck.
- Minimise moisture on the inside of the bottleneck.
- Headspace at 20°C should be at least 15 mm.
- Internal pressure after corking should not exceed 1.2 bar. Vacuum bottling is recommended.

### Equipment Maintenance

- Maintain the corker jaws free of nicks and signs of wear.
- Ensure proper alignment of plunger and location ring.
- Ensure corking machine operates smoothly, especially during compression.
- Clean all cork-handling surfaces regularly with chlorine-free products.
- Ensure the equipment is suited to the cork used.

### Storage and Transport of Wine

- After bottling, the bottles should be kept in an upright position for at least 10 minutes.
- Ideal bottle storage conditions are 15-25°C at 50-70% humidity.
- Keep the wine cellar free of insects.
- Bottles should be transported in an upright position.

Please always check the most update product technical sheets as the manufacturer reserves its right to implement product changes without prior notice.